Installation Instructions

Descriptions

The luminaire contains constant-current driver(s) and LED module(s). It works under technical conditions as the product labels indicate. Its modular design makes it convenient to replace whichever of the modules that failed.

Technical Parameter

	LED Flood Light						
Module Quantity	1	2	3	4	5	6	7
Power	60W	120W	180W	240W	300W	360W	420W
Input Voltage	□ 100~240V □ 100~277V □ 220~240V □ 120~277V □ 277~480V □ Other Frequencey 50/60H:					cey 50/60Hz	
Power Factor	0.95						
Working Environment	-40℃~+50℃, 10%~90%RH						
Bolt Torque	17Nm						
Mounting Height	0~35m						
Dimensions	350x350x335mm	430x350x335mm	510x350x335mm	590x350x335mm	670x350x475mm	750x350x475mm	830x350x475mm
Net Weight	4.8kg	6.4kg	7.4kg	8.3kg	11.1kg	12.5kg	13.7kg
Project Area	0.123m²	0.151m ²	0.179m²	0.207m ²	0.235m²	0.263m ²	0.291m²
Degree of Protection	☐ IP54 ☐ IP65 ☐ IP66 ☐ IP67 ☐ Other						


Notes: The above net weight is typical value. The power above are maximum rated power of the model subject to tolerance of 10%.

Applications


Architectural exterior lighting for single building and historical complex; flood lighting on buildings; indoor area lighting; landscape lighting; billboard lighting; medical, cultural and other establishment lighting; bar, club and other atmosphere lighting; port, air port and other traffic and parking area lighting.

Installation and Maintenance

Installation

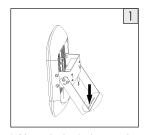

Mount the luminaire onto the wall or ground.
(recommend M10 screws)

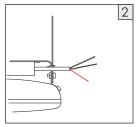


2. Connect to the L, N, and G wires of AC input correctly.



Loosen the screws at sides on bracket to adjust the fixture to a right angle. Then tighten up the screws.

 Maintenance




Undo the cable connectors
of the module to be replaced.



2. Undo the screws on ends of that module.



 3. Plug out that module and replace with a new one.



4. Connect the cable and tighten up the screws.

Installation Instructions

Cable Connectors



Connect the male and female connectors by aligning the indicative arrow on them.



Hold the nut on one terminal still, meanwhile, rotating clockwise till the one on the other terminals is tightened up.Otherwise thewaterproof performance might be affected.

Wiring

	Power Supply End	Earth wire	Neutral wire	Live wire	
Fixture E	Fixture End	Yellow-green lead	Blue lead	Brown lead	
	Tixture Life	Green lead	White lead	Black lead	

Caution


- a Disconnect or turn off power before installation, maintenance and wiring.
- b Cable connection must be insulated and waterproof.
- C For luminaires with glass cover: the cover is made of tempered glass which shatters into small pieces without sharp edges when it breaks. Application condition: -30°C~100°C; maximum temperature rise ∆t60°C.
- The light source of this luminaire is not replaceable. When the light source's lifetime comes to an end, it is the whole luminaire that should be replaced.

Warning: Danger! Electric shock risk!


(via IEC 60417-6042 (2011-11))



For luminaires with glass cover: The broken cover should be replaced.

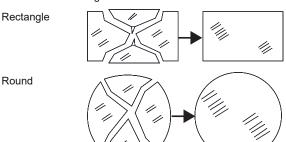

 Minimum distance from the light source to the illuminated object: 0.1m.



The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

Remarks

- 1. This luminaire uses permanent connection on power supply with flexible cable and wires (60245 IEC57). Sufficient length of cable is reserved for connection to AC power. Protection over the connection joint and elimination of tensile force there should be ensured.ufficient.
- 2. This luminaire uses type Z attachment: the external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- 3. Wiring: the connection to AC power should be operated on terminal blocks in a wiring box with a degree of protection at least equivalent to the luminaire, and there should be devices to fixate wires.
- 4. The luminaire can be mounted onto ordinary combustible surfaces.