# Installation Instructions

# Descriptions

The luminaire contains a constant-current driver and a LED module. It works under technical conditions as the product labels indicate. Its modular design makes it convenient to replace the module when it fails.

# **Technical Parameter**

	LED Garden Light			
Module Quantity	1			
Power	60W			
Input Voltage	☐ 100~240V ☐ 100~277V ☐ 220~240V ☐ 120~277V ☐ 277~480V ☐ Other Frequencey 50/60Hz			
Power Factor	0.95			
Working Environment	-40℃~+50℃, 10%~90%RH			
Bolt Torque	8Nm			
Mounting Height	6~15m			
Mounting Spacing	20~45m			
Dimensions	Ф450x440x495mm			
Net Weight	6.0kg			
Project Area	0.160m <sup>2</sup>			
Degree of Protection	☐ IP54 ☐ IP65 ☐ IP66 ☐ IP67 ☐ Other			


Notes: The above net weight is typical value. The power above are maximum rated power of the model subject to tolerance of 10%.

## **Applications**


Landscape in garden, path, park, campus, yard, residential area, etc.

## Installation and Maintenance


### Installation

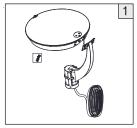


 Open the carton and check the following supplies: M6x20 hexagonal socket screws - 4 pcs/bag; Luminaire body - 1 set; Bent arm - 1 set

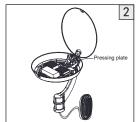


Open the top cover, loosen the cable clip, and pull the cable from the bent arm into the casing. Then tighten up the cable clip to fixate the cable.

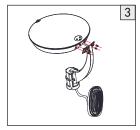

 Fix the bent arm to the luminaire body with four M6x20 hex screws. Assembly finished.

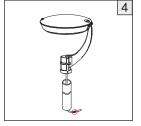


 Connect the wires to L, N, and G of AC input. Make sure it sufficiently grounded.

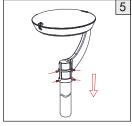

Mount the fixture onto a post, and tighten up the screws. Installation finished.

Remarks: the above procedures are for arm-unassembled packaging; for fully-assembled packaging, installation starts from step 4.


### Maintenance

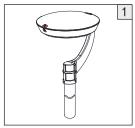

 Turn off or disconnect the fixture from the power.
Unscrew and open the top cover.



Undo the screws and connector for the module, and replace it with a new one. Tighten up again.

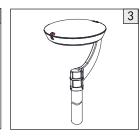

3. Close the top cover, and tighten up the screws.

## Installation Instructions

#### Cable Connectors



 Connect the male and female connectors by aligning the indicative arrow on them.



 Hold the nut on one terminal still, meanwhile, rotating clockwise till the one on the other terminals is tightened up.Otherwise thewaterproof performance might be affected.

#### Wiring

Power Supply End	Earth wire	Neutral wire	Live wire
Fixture End	Yellow-green lead	Blue lead	Brown lead
Tixture Liiu	Green lead	White lead	Black lead

#### Caution

- a Disconnect or turn off power before installation, maintenance and wiring.
- b Cable connection must be insulated and waterproof.
- For luminaires with glass cover: the cover is made of tempered glass which shatters into small pieces without sharp edges when it breaks. Application condition: -30°C~100°C; maximum temperature rise Δt60°C.
- d The light source of this luminaire is not replaceable. When the light source's lifetime comes to an end, it is the whole luminaire that should be replaced.

Warning: Danger! Electric shock risk!

(via IEC 60417-6042 (2011-11) )




For luminaires with glass cover: The broken cover should be replaced.

Rectangle



Round

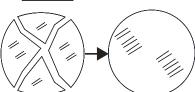

The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

### Remarks

- 1. This luminaire uses permanent connection on power supply with flexible cable and wires (60245 IEC57). Sufficient length of cable is reserved for connection to AC power. Protection over the connection joint and elimination of tensile force there should be ensured.ufficient.
- 2. This luminaire uses type Z attachment: the external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- 3. Wiring: the connection to AC power should be operated on terminal blocks in a wiring box with a degree of protection at least equivalent to the luminaire, and there should be devices to fixate wires.
- The luminaire can be mounted onto ordinary combustible surfaces.