# Installation Instructions

# **Descriptions**

The luminaire contains constant-current driver(s) and LED module(s). It works under technical conditions as the product labels indicate. Its modular design makes it convenient to replace whichever of the modules that failed.

# **Technical Parameter**

	LED Street Light						
Module Quantity	1	2	3	4	5	6	7
Power	60W	120W	180W	240W	300W	360W	420W
Input Voltage	☐ 100~240V ☐ 100~277V ☐ 220~240V ☐ 120~277V ☐ 277~480V ☐ Other Frequencey 50/60Hz						
Power Factor	0.95						
Working Environment	-40℃~+50℃, 10%~90%RH						
Bolt Torque	17Nm						
Mounting Height	6~15m						
Mounting Spacing	20~45m						
Dimensions	595x330x90mm	645x330x90mm	725x330x90mm	805x330x90mm	885x330x90mm	1065x330x90mm	1145x330x90mm
Net Weight	6.5kg	8.0kg	9.0kg	10.5kg	11.5kg	13.0kg	15.0kg
Project Area	0.197m <sup>2</sup>	0.213m <sup>2</sup>	0.240m <sup>2</sup>	0.266m <sup>2</sup>	0.293m <sup>2</sup>	0.352m <sup>2</sup>	0.378m <sup>2</sup>
Degree of Protection	☐ IP54 ☐ IP65 ☐ IP66 ☐ IP67 ☐ Other						

Notes: The above net weight is typical value. The power above are maximum rated power of the model subject to tolerance of 10%.

## **Applications**

Expressway, highway, avenue, trunk road, sub-trunk road, path, parking lot, factory, schoolyard, garden, park, residential area, courtyard, etc.

## Installation and Maintenance

### Installation



1. Unscrew and remove the rear cover. Unscrew and open the back cover.



2. Stick the pole arm under the two pole clamps and tighten up the four screws to fixate it.



3. Connect the wires to L, N, and G of AC input. Make sure it sufficiently grounded.



4. Close the back cover, install the rear cover and tighten up all screws.

### Maintenance



 
1. Unscrew and open the back cover.



2. Undo the screws on both ends of the module to be replaced.



3. Undo the cable conne- 4. Plug out the module. ctors to that module






5. Replace with a new module. Tighten up screws and connect the cable.



6. Close the back cover and tighten up the screws

## Installation Instructions
 
#### Cable Connectors



Connect the male and female connectors by aligning the indicative arrow on them.



 Hold the nut on one terminal still, meanwhile, rotating clockwise till the one on the other terminals is tightened up.Otherwise thewaterproof performance might be affected.

#### Wiring

Power Supply End Earth wire		Neutral wire	Live wire	
Fixture End	Yellow-green lead	Blue lead	Brown lead	
T IXIUTE LIIU	Green lead	White lead	Black lead	

#### Caution

- a Disconnect or turn off power before installation, maintenance and wiring.
- b Cable connection must be insulated and waterproof.
- For luminaires with glass cover: the cover is made of tempered glass which shatters into small pieces without sharp edges when it breaks. Application condition: -30°C~100°C; maximum temperature rise \( \Delta 60°C. \)
- The light source of this luminaire is not replaceable. When the light source's lifetime comes to an end, it is the whole luminaire that should be replaced.

 
Warning: Danger! Electric shock risk!

(via IEC 60417-6042 (2011-11) )




For luminaires with glass cover: The broken cover should be replaced.

Rectangle



Round

 

The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

### Remarks

- This luminaire uses permanent connection on power supply with flexible cable and wires (60245 IEC57). Sufficient length of cable is reserved
  for connection to AC power. Protection over the connection joint and elimination of tensile force there should be ensured. ufficient.
- 2. This luminaire uses type Z attachment: the external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- 3. Wiring: the connection to AC power should be operated on terminal blocks in a wiring box with a degree of protection at least equivalent to the luminaire, and there should be devices to fixate wires.
- 4. The luminaire can be mounted onto ordinary combustible surfaces.