Installation Instructions

Descriptions

The luminaire contains constant-current driver(s) and LED module(s). It works under technical conditions as the product labels indicate. Its modular design makes it convenient to replace whichever of the modules that failed.

Technical Parameter

	LED Flood Light				
Module Quantity	1	2	3		
Power	60W	120W	150W		
Input Voltage] 100~240V 100~277V 220~240V 120~277V 277~480V Other Frequencey 50/60H;				
Power Factor	0.95				
Working Environment	-40℃~+50℃, 10%~90%RH				
Bolt Torque	17Nm				
Mounting Height	0~35m				
Dimensions	250x325x200 mm	330x325x200 mm	410x325x200 mm		
Net Weight	3.6kg	5.0kg	6.4kg		
Project Area	0.082m²	0.108m²	0.134m²		
Degree of Protection	☐ IP54 ☐ IP65 ☐ IP66 ☐ IP67 ☐ Other				


Notes: The above net weight is typical value. The power above are maximum rated power of the model subject to tolerance of 10%.

Applications


Architectural exterior lighting for single building and historical complex; lighting form interior lights on building; indoor local lighting; landscape lighting; billboard lighting; medical, cultural and other special facility lighting; bar, club and other atmosphere lighting.

Installation and Maintenance


Installation

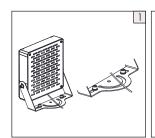

1. Mount the luminaire with M10 2. Connect wires to L, N, and G screws (not provided) at bracket. of AC input correctly. Make

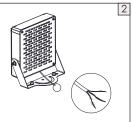

sure it grounded sufficiently.

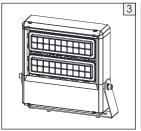

3. Loosen the M10 screws on bracket at sides.




4. Adjust the luminaire to the right angle.



5. Tighten up the screws at sides. Installation finished.


Maintenance

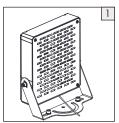

1. Cut off the power supply. Undo the four M4 cross recess pan head screws on the back to remove the plate.



2. Undo the screws on the module at two ends. Disconnect the cable. Replace the module.

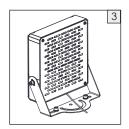

3. Installed the new module. Tighten up its screws and cable connector. Install the back plate with screws.

Installation Instructions

Cable Connectors



Connect the male and female connectors by aligning the indicative arrow on them.



Hold the nut on one terminal still, meanwhile, rotating clockwise till the one on the other terminals is tightened up.Otherwise thewaterproof performance might be affected.

Wiring

Power Supply End	Earth wire	Neutral wire	Live wire
Fixture End	Yellow-green lead	Blue lead	Brown lead
Tixture Life	Green lead	White lead	Black lead

Caution


- a Disconnect or turn off power before installation, maintenance and wiring.
- b Cable connection must be insulated and waterproof.
- C For luminaires with glass cover: the cover is made of tempered glass which shatters into small pieces without sharp edges when it breaks. Application condition: -30°C~100°C; maximum temperature rise Δt60°C.
- The light source of this luminaire is not replaceable. When the light source's lifetime comes to an end, it is the whole luminaire that should be replaced.

Warning: Danger! Electric shock risk!


(via IEC 60417-6042 (2011-11))



For luminaires with glass cover: The broken cover should be replaced.

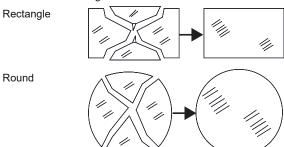

Minimum distance from the light source to the illuminated object: 0.1m.

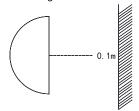

The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

Remarks

- 1. This luminaire uses permanent connection on power supply with flexible cable and wires (60245 IEC57). Sufficient length of cable is reserved for connection to AC power. Protection over the connection joint and elimination of tensile force there should be ensured.ufficient.
- 2. This luminaire uses type Z attachment: the external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- 3. Wiring: the connection to AC power should be operated on terminal blocks in a wiring box with a degree of protection at least equivalent to the luminaire, and there should be devices to fixate wires.
- 4. The luminaire can be mounted onto ordinary combustible surfaces.