Installation Instructions

Descriptions

The luminaire contains a constant-current driver and LED light sources. It works under technical conditions as the product labels indicate

Technical Parameter

	LED Tunnel Lights		
Power	60W		
Input Voltage	☐ 100~240V ☐ 100~277V ☐ 220~240V ☐ 120~277V ☐ 277~480V ☐ Other Frequencey 50/60Hz		
Power Factor	0.95		
Working Environment	-40℃~+50℃, 10%~90%RH		
Mounting Height	4~6m		
Bolt Torque	8Nm		
Dimensions	305x175x170mm		
Net Weight	Weight 3.5kg		
Project Area	0.054m ²		
Degree of Protection	☐ IP54 ☐ IP65 ☐ IP66 ☐ IP67 ☐ Other		

Notes: The above net weight is typical value. The power above are maximum rated power of the model subject to tolerance of 10%.

Applications


Trunk road, sub-trunk road, highway and other roads in tunnels.

Installation and Maintenance

Installation



Mount the luminaire onto the wall with four screws.
(recommend M8 screws)

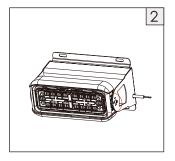


Loosen the M6 screws at sides to adjust the fixture to a right angle. Then tighten up the screws.



3. Connect to the L, N, and G wires of AC input correctly.

Cable Connectors

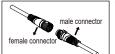

1. Connect the male and female connectors by aligning the indicative arrow on them.



Hold the nut on one terminal still, meanwhile, rotating clockwise till the one on the other terminals is tightened up.Otherwise thewaterproof performance might be affected.

Wiring

Power Supply End	Earth wire	Neutral wire	Live wire
Fixture End	Yellow-green lead	Blue lead	Brown lead
Tixtule Liiu	Green lead	White lead	Black lead

Installation Instructions

Caution

- a Disconnect or turn off power before installation, maintenance and wiring.
- b Cable connection must be insulated and waterproof.
- For luminaires with glass cover: the cover is made of tempered glass which shatters into small pieces without sharp edges when it breaks. Application condition: -30°C~100°C; maximum temperature rise \times \times 0.00°C.
- The light source of this luminaire is not replaceable. When the light source's lifetime comes to an end, it is the whole luminaire that should be replaced.

Warning: Danger! Electric shock risk!


(via IEC 60417-6042 (2011-11))



For luminaires with glass cover: The broken cover should be replaced.

Rectangle

Round

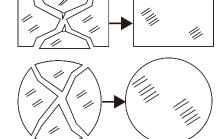

The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

Remarks

- 1. This luminaire uses permanent connection on power supply with flexible cable and wires (60245 IEC57). Sufficient length of cable is reserved for connection to AC power. Protection over the connection joint and elimination of tensile force there should be ensured.ufficient.
- 2. This luminaire uses type Z attachment: the external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
- 3. Wiring: the connection to AC power should be operated on terminal blocks in a wiring box with a degree of protection at least equivalent to the luminaire, and there should be devices to fixate wires.
- 4. The luminaire can be mounted onto ordinary combustible surfaces.